

Registering Waypoints

A waypoint can be entered four ways. Below is the procedure for entry by the cursor.

1. Operate the cursor pad to place the cursor on the location where you want to inscribe a waypoint.
2. Press the [ENT] key.

```
CURSOR POS. → WYPT

ENTER A NEW WYPT NAME.
 001 --- ?
(001: DEFAULT NAME)

Quit : [MENU]
```

3. Press the [ENT] key.

```
NAME: KOBE
 34°44.000'N   MARK
135°21.000'E   x
10-APR 11:25  AMD

Exit? LOG RT?
```

4. Place the cursor under "MARK".
5. Press the [ENT] key.
6. Press ▲ or ▼ to select mark shape desired.
7. Press the [ENT] key.
8. Select "Exit?" and then press the [ENT] key.

Registering Routes

1. Press the [MENU] key once or twice to display the menu.
2. Select "ROUTES".
3. Press the [ENT] key.
4. Press the [ENT] key.
5. Press the [ENT] key, select route waypoint and press the [ENT] key.
6. Repeat step 5 to enter other waypoints on the route.
7. Select "Exit?" to register route and finish.
8. Press the [ENT] key to register.

Setting, Cancelling Destination

Destination can be set three ways. Below is the method for setting destination by the cursor.

To set destination by cursor;

1. Press the [GOTO] key.
2. Select "CURSOR?".
3. Press the [ENT] key.
4. Place the cursor on position to set as destination.
5. Press the [ENT] key.

To cancel destination;

1. Press the [GOTO] key.
2. Select "OFF?".
3. Press the [ENT] key.

Setting the Arrival Alarm

1. Press the [MENU] key once or twice to display the menu.
2. Select "ALARMS".
3. Press the [ENT] key.
4. Select "ARV/ANC" and press the [ENT] key.
5. Select "ARV" and press the [ENT] key.
6. Press the [ENT] key and enter arrival alarm range with the cursor pad.
7. Press the [ENT] key.
8. Press the [MENU] key twice to finish.




GP-36 DGPS NAVIGATOR GP-31 GPS NAVIGATOR Operator's Guide

The purpose of this operator's guide is to provide the basic operating procedures for this equipment. For detailed information, refer to the operator's manual.

Selecting Display Mode

Press the [DISP] key until desired display mode appears.

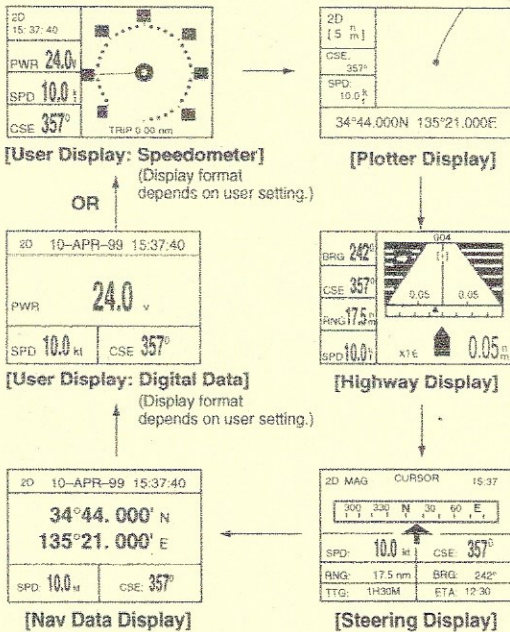

Enlarging, Shrinking the Display Range

1. Press the [MENU] key.
2. Press the [ENT] key.
3. Press ▲ to increase; ▼ to decrease.
4. Press the [ENT] key to close the window.

Shifting the Cursor, Display

1. On the plotter display, press the cursor pad to turn on and shift the cursor.
2. Place the cursor on an edge of the screen and use the cursor pad to shift the display.

Centering Own Position

1. Press the [MENU] key.
2. Select "SHIP TO CENTER?".
3. Press the [ENT] key.

Entering MOB Mark

1. Press the [MARK/MOB] key.
2. Select "MOB?".
3. Press the [ENT] key.
4. Press the [ENT] key again.

